


Top shelf side supports ( Returns) Come supplied in Pairs, the reverse side may have breakout, clean side is the face. Fix to side wall and or column of shelves ( if applicable) top edge flush with top of back wall batten. Hanging rail sockets can be mounted on these returns. Sockets bottom edge, flush with bottom edge of return.

If you have a hanging interior without a column of shelves then the top shelf can go at a height to suit your needs. If you wish to take advantage of the double hanging then we suggest that you fix the top shelf at 2040mm . This is the height of the column of shelves, and if your interior has these then the battens need to be fixed with their top edge 18/19 mm down from the top edge of the column so that the shelf is flush.

Top of column, slot for back is open

Push wooden dowels into these holes on each row of both column cheeks.

Screw metal cam pegs into these holes, on each row of both column cheeks.

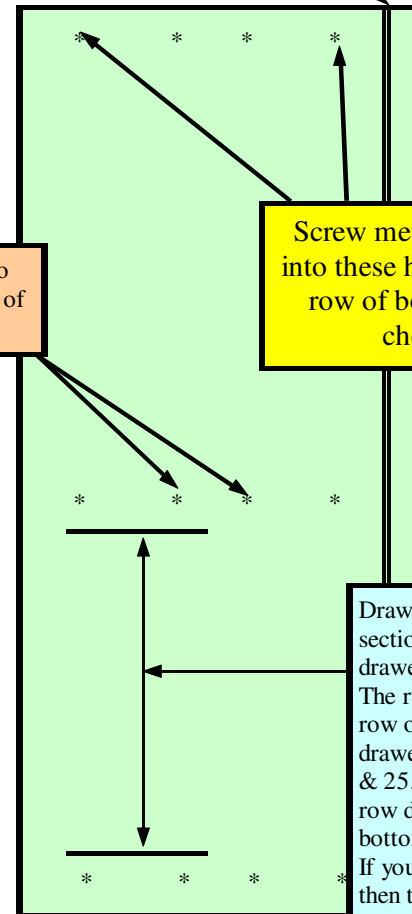

Drawer box runners go into this section here. Start with the first drawer under the centre shelf. The runner screws into the first row of 5mm holes, subsequent drawers go into rows; 7, 13, 19, & 25. Counting from the first row down, row 25 will be the bottom row. If you do not have drawers, then these holes are for the adjustable shelves.