


Superglide Wardrobes

The Old Carpenters Yard, Coleshill,
Swindon, N.Wiltshire. SN6 7PT
Tel: 01793 861584 e-mail: sales@superglidewardrobes.co.uk
www.superglide.co.uk



Superglide Sliding door fitting instructions

1. Cut top track to required length minus 1mm to fit to ceiling. Set the top track flush with the front of frame work. Have a fixing in the front and back channels every 600mm.
2. Cut the bottom track to the required length and place 25mm back from the plumb line down from the face of top track. Screw the bottom track down onto Plinth or floor with screws about every 600mm apart. See diagram to right.
3. Pretrud the wheels by 10mm, by adjusting the screw head on top of wheels. Next and lift the door into the required channel of top track and swing the bottom of door and sit into required channel.
4. Check the wheels are sat in the required channels.
5. Repeat this for remainder of doors.
6. When all doors are in place, line all doors to the walls and each other by winding the screw on top of the wheel up or down. If doors are raised too much they may bind on screws fixing top track to ceiling so lower the door. Equally do not lower too much so its does not bind on bottom track. The best way to solve this is to lye on the floor and check each door.

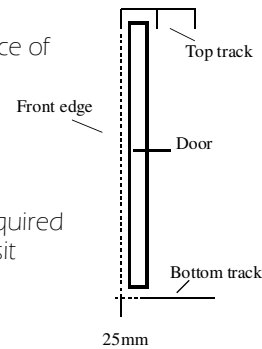

* Please check the doors carefully when delivered, in particular please ensure glass panels are not cracked. We do not replace glass doors once delivery has been accepted by the customer.*

